

Standard

Operating the lever located at the bottom of the seat enables you to adjust the chair's backrest recline and seat height.



FUNCTION



Seat Height Adjustment Lever

The lever located at the bottom-right of the seat is used to adjust the seat height.



Reclining Lever

The lever located at the bottom-left of the seat is used to lock and unlock the recline. The lever is also used for tilting forward as well.



Reclining Tention Adjustment

The reclining tention adjustment can be adjusted by the operation of the lever located at the bottom-right of the seat



Seat Height Adjustment

The seat height can be adjusted.



Synchro Reclining

"Synchro reclining" enables the chair's backrest and seat to be synchronously reclined. The maximum angle is 23 degrees for back and 10 degrees for forth.



Seat Depth Adjustment

The seat can be slid back and forth in the range of 50mm by use of the lever located at the bottom-left of the seat.



Adjustable Arms (3D Arms)

The up and down (1D), angle (2D), and back and forth (3D) positioning of the elbow pad are adjustable. The respective movable ranges are 100mm for up and down, 20 degrees for inside, 20 degrees for outside, and 40mm for back and forth.



Multiple Density Cushion

Three types of urethane with different density are employed to form the cushion. A soft cushion is used at the front of the seat so as not to compress the thighs, and a hard cushion is used at the rear for firm support.

OPTION



Headrest

The large headrest will firmly support the back of the head.



Hanger

The stylish hanger leaves a strong design impression.



Lumber Support

The lumber support that firmly grasps the lower back can be adjusted within a vertical range of 60mm to match your physical requirement.



Adjustable Arms

The arms are designed to support various types of work at office.



Fixed Arms

The arms are suitable for meeting rooms.

8